

### SEA-BIRD ELECTRONICS, INC.

1808 136th Place N.E., Bellevue, Washington 98005 USA Telephone: (425) 643-9866 Telex: 292915 SBEI UR Fax: (425) 643-9954 email: seabird@seabird.com

SBE P/N 50062

DATE	REV	REVISION RECORD	AUTH	DR	CHK
02.99	Α	Add Drawing, reformat document	MJ	CEG	
07.13.04	В	Changed Descriptions for Impeller and Pump Head o-rings	ET	KLP	
03.17.06	С	Add Thrust Washer, PN 30095	CB	MJ	

# **SBE 5T Pump Housing O-Ring Kit**

#### KIT CONTENTS

SBE P/N	Manufacturer P/N	Primary SBE Application	QTY
30010	Pump Thrust Washer, 115-033-10	Thrust Washer for Pump Impeller	2
30082	Parker O-Ring, 2-213N674-70	Connector Endcap O-Ring	1
30095	Parker O-Ring, 2-002N674-70	Pump Impeller O-Ring	1
30571	Parker O-Ring, 2-124N674-70	Pump Head O-Ring	1

## Pump Housing O-Ring Replacement

#### A. General O-Ring Installation

- 1. O-rings must be cleaned and lubricated with Silicone-Based lubricant before installing.
- 2. Never use petroleum-based lubricant.
- 3. Never clean an o-ring with any type of abrasive material.
- 4. Always inspect all o-rings and o-ring surfaces for scratches or dirt before installation.

### **B.** Pump Impeller O-Ring and Thrust Washer (30095, 30010)

- 1. Install one of the thrust washers (30010) onto the shaft.
- 2. The Impeller should then be slid down all the way onto the shaft, followed by the second thrust washer (30010).
- 3. Secure the fixture into placed with the pump impeller o-ring (30095).
  - a. Do not put any lubricate on this o-ring.

#### C. Pump Head O-Ring (30571)

- 1. Lube the o-ring groove on the housing and Pump Head O-Ring (30571)
- 2. Install the o-ring into the housing groove.
- 3. Press the o-ring as tightly as possible into the groove.
- 4. Backthread the pump head (23593) over the O-Ring until both are firmly seated and then thread the pump head hand tight onto the housing.

#### **D.** Connector Endcap O-Ring (30082)

CDE DD AWING, (7030 A

- 1. Lubricate the o-ring and o-ring groove, as well as the housing seating surface with o-ring lubricant.
- 2. Install the o-ring by carefully sliding it completely over the bulkhead connector.
- 3. Next, use a plastic spatula to pry the o-ring over the endcap into its groove.

SDE DRAWING. 0/029A	Sea-Bird Electronics Pro	cedure	
THE THE STEP IN A SECOND SECON	PROCEDURE NUMBER: 67029		
TITLE: 5T Pump Housing O-Ring Installation	TITLE: SBE 5T Pump Housing O-Ring Kit		
	REVISION: C		
	EFFECTIVE DATE: <b>03/17/2006</b>		
	CHECKED BY: I	PAGE 1of 1	

